

AirWave[®] 2



Replacing the 4 PIN connector with an 8 PIN
connector
(04.02.2021)


Cut off the 4 pin connector



Dismantle the sensor cable.



Cut off the not needed mantle and strip
the 3 conductors.

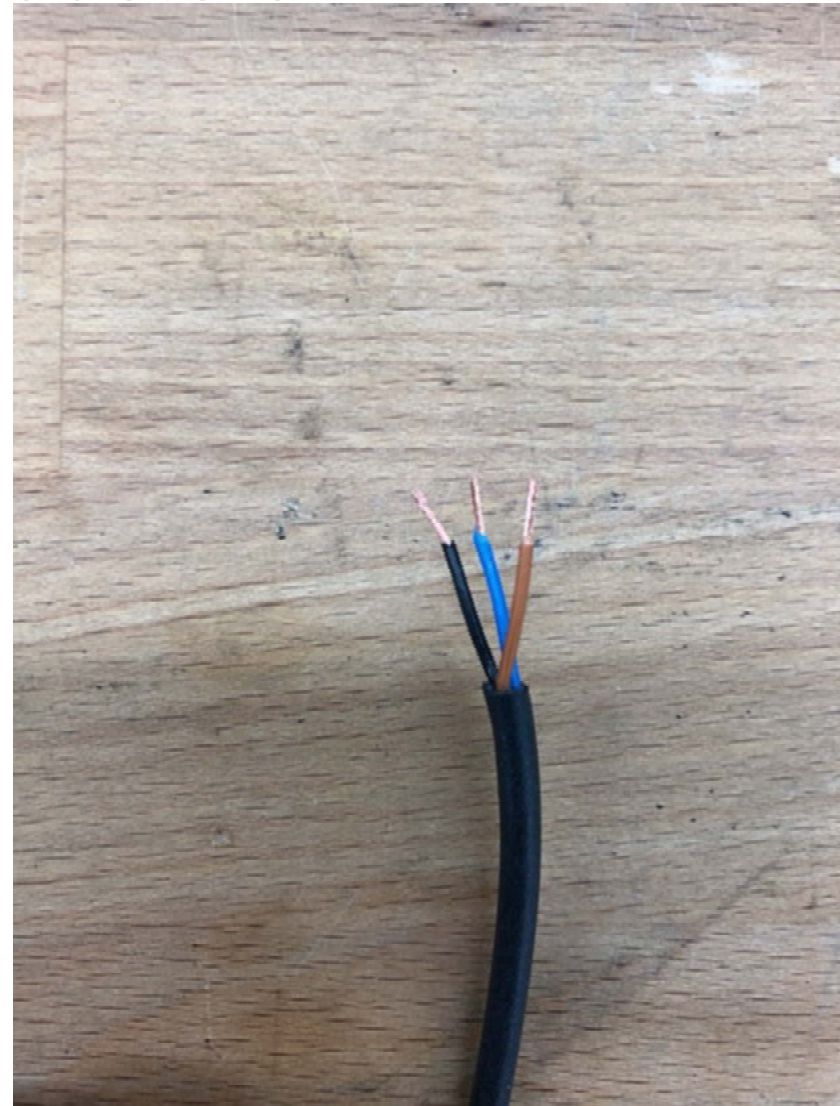


Insert the sensor cable through the main body of the 8 pin connector.




Unscrew the worm-screws of the pins 2, 3,
4.



Fix the conductors according to the plan below.

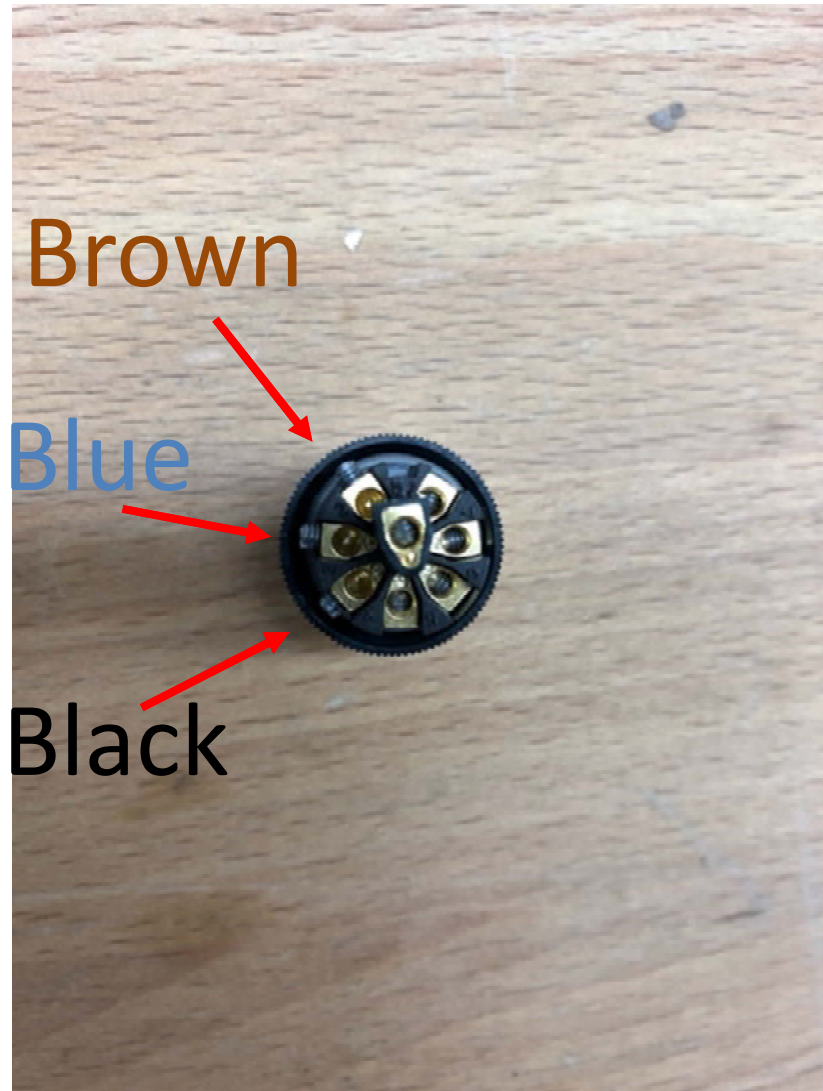

Insert the head of the 8 pin connector to the main body and fix the bolts.

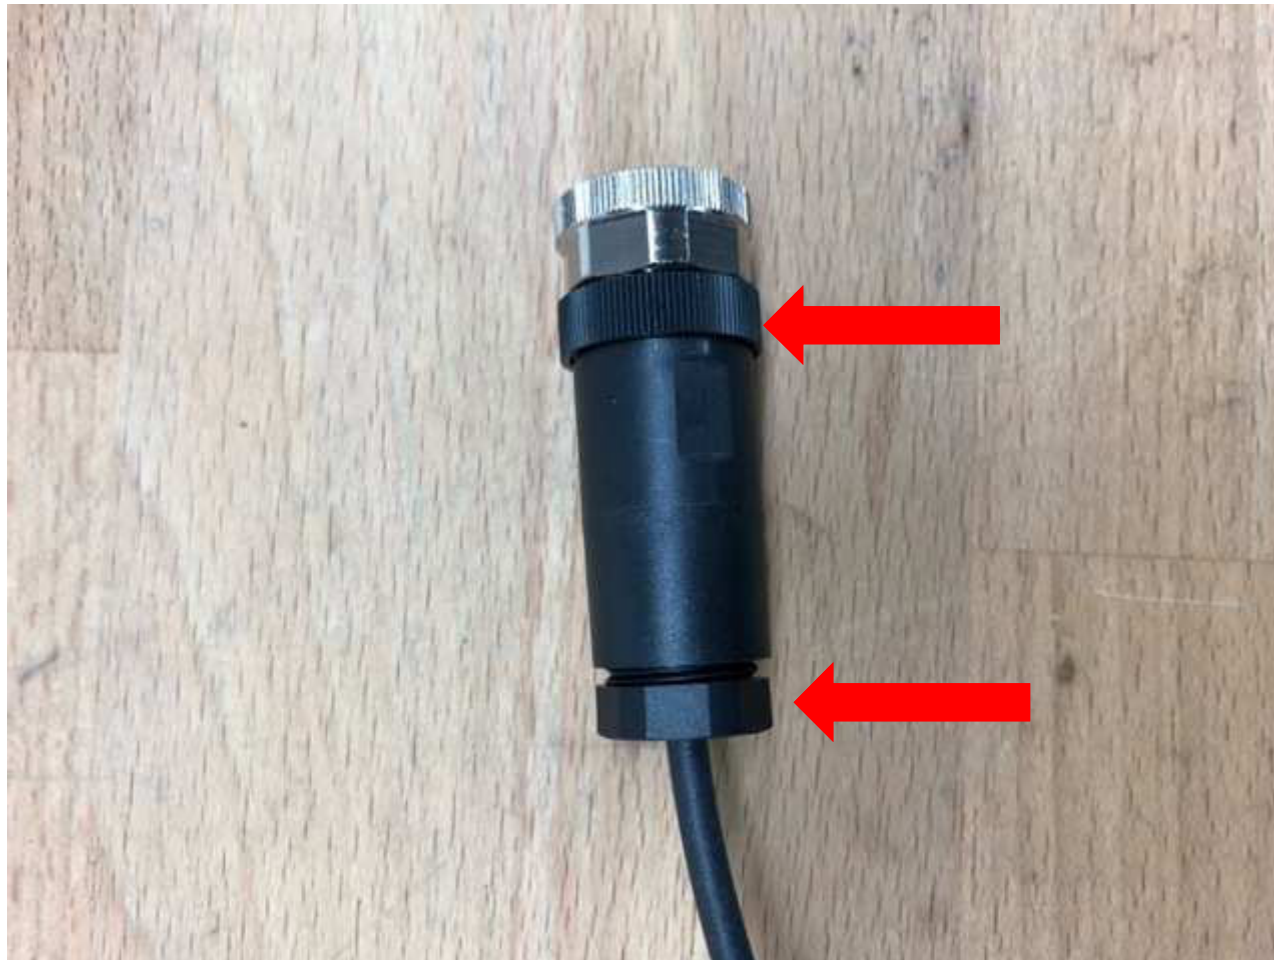

Technical Problems?

Please contact our Service Technician:

- **Mister Taner Azizoglou Mobil: +49 172 1497558**



- **Mister Silvester Dobosch Mobil: +49 173 2594960**

